

Metrologic Scanner Configuration for Hayner Library Patron Barcodes (2013)

Enter/Exit Configuration Mode



3 Fast Beeps



~ Character to Replace

1 Beep



Code Byte 0

1 Beep



Code Byte 3

2 Beeps



Code Byte 2

3 Beeps



~ Replacement Character

1 Beep



No Replacement

1 Beep

Enter/Exit Configuration Mode



3 Slow Beeps

If you mess up, just start at the top of the document and try again. The beginning should always start with 3 fast beeps. If the scanner “growls” at you, then you aren’t in configuration mode and will need to start at the top again.